- The BROWN coloured wire must be connected to the pin terminal, which is marked with the letter L (Live) or is coloured RED.
- The BLUE coloured wire must be connected to the pin terminal which is marked with the letter N (Neutral) or is coloured BLACK.
- **DO NOT CONNECT** either of these wires to the earth terminal in the plug. The earth terminal is marked with the letter E (⏚) or is coloured GREEN, or GREEN&YELLOW.

GUARANTEE

PLEASE KEEP YOUR RECEIPT AS THIS WILL BE REQUIRED FOR ANY CLAIMS UNDER THIS GUARANTEE.

- This appliance is guaranteed for 5 years after your purchase as described in this document.
- During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.
- The rights and benefits under this guarantee are additional to your statutory rights which are not affected by this guarantee. Only Holmes Products (Europe) Ltd. (“Holmes”) has the right to change these terms.
- Holmes undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that
  - you promptly notify the place of purchase or Holmes of the problem; and
  - the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by Holmes.
- Faults that occur through, improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of Holmes, repair or alteration by a person other than a person authorised by Holmes or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.
- The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use

Waste electrical products should not be disposed of with Household waste. Please recycle where facilities exist.
E-mail us at enquiriesEurope@Jardencs.com. for further recycling and WEEE information.

Holmes Products (Europe) Limited
1, Francis Grove
London, SW19 4DT UK

BIONAIRE™

Holmes Products (Europe) Ltd
1 Francis Grove
London SW19 4DT
England

Fax: +44 (0)20 8947 8272
Email: enquiriesEurope@jardencs.com
Website address: www.bionaire.com/europe
UK - Free phone Customer Service Helpline – 0800 052 3615

CE

© 2008 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Imported and Distributed by Holmes Products (Europe) Ltd., 1 Francis Grove, London SW19 4DT, United Kingdom.

SPR-061708
Printed in China

P/N: 128117

BIONAIRE™

Oil Filled Radiator

BOH1501
BOH2001

INSTRUCTION MANUAL

BOH1501/2001

Fig. 1

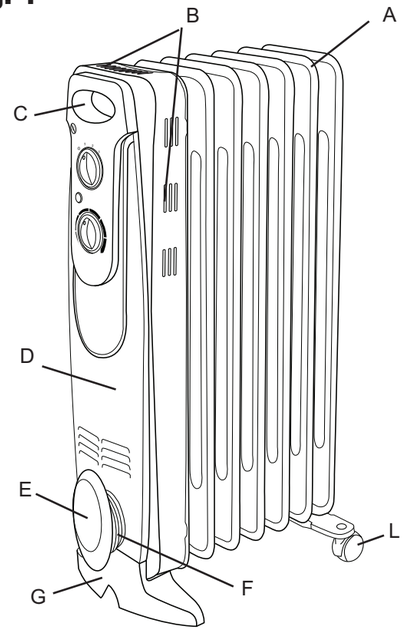

Fig. 2

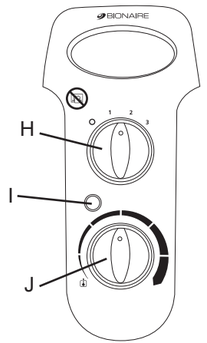

Fig. 3

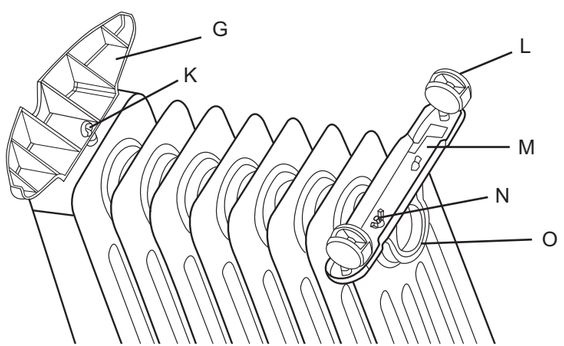

U.K. and IRELAND

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Before connecting the heater, check that the voltage indicated on the rating plate corresponds to the main voltage in your home/office.
2. **WARNING: In order to avoid overheating, do not cover the heater (⃠) Reference to product.**
3. **DO NOT** position the heater directly under a power socket.
4. **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
5. If the supply cord or plug is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard. The heater contains no user serviceable parts. Should the product suffer damage or breakdown, it must be returned to the manufacturer or their service agent.
6. Under the environment with electrical fast transient, the product may malfunction.
7. **DO NOT** use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
8. Only touch the heater with dry hands.
9. **DO NOT** use this heater outdoors.
10. **DO NOT** position where it can be touched by children, especially the very young.
11. Allow a safe area around the heater away from furniture or other objects; at least 50 cm from the top and sides and 200 cm at the front. The heater is to be placed at least 3m from water source.
12. **DO NOT** use this heater when it is lying on its side.
13. **DO NOT** use the heater in rooms with explosive gas (e.g. petrol) or while using, oxygen, inflammable glue or solvent (e.g. when gluing or varnishing parquet floors, PVC etc.)
14. **DO NOT** insert any objects into the heater.
15. Keep the mains cord at a safe distance from the main body of the heater.
16. If overheating should occur, the built-in overheating safety device will switch off the heater.
17. **DO NOT** place the cord under a rug.
18. The heater cannot be used adjacent to curtains or combustible material. Curtains or combustible material may be burned if the heater was installed incorrectly.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

DESCRIPTIONS (See Fig. 1, 2 & 3)

A. Heated Fins
B. Vents
C. Handle
D. Front Panel
E. Cord Storage
F. Power Cord
G. Front Stand
H. Control Knob
I. Power Light
J. Thermostat Knob
K. Q Shape Screw
L. Casters
M. Foot Plate
N. Wing Nut
O. U-bolt

Technical Specifications

BOH1501
Wattage: 1500W

BOH2001
Wattage: 2000W

ASSEMBLY INSTRUCTIONS (See Fig. 3)

Please make sure the heater has not been plugged into any electricity outlet.

Carefully remove heater from box. Some acessories are packed internally. Please make sure you have all of the following acessories prior to throwing away packaging.
1 Foot Plate with 2 casters (M&L), 1 Front Stand (G), and 1 Q shape Screw (K) and 1 Wing Nut (N).

Note: This unit is for FLOOR USE ONLY.

1. Turn the heater upside down and you will see one U-bolt (O) with wing nut over the last joint of the heater.
2. Unscrew the wing nut (N) from the U-bolt (O).
3. Place one hole of the foot plate (M) to the L shape of the U-bolt (O) and the other hole of the foot plate into the other end of the U-bolt, then screw on the wing nut (N).
4. Place the front stand (G) on the bottom of the radiators front panel, and secure it with the Q shape screw (K). This front stand (G) is not meant to be removed once it is attached to the bottom of the unit.
5. After installation of the front stand (G) and foot plate (M) with casters (L) turn the heater the right way up: the heater is now ready for use.

OPERATING INSTRUCTIONS (See Fig. 1&2)

1. Set the unit to the OFF (O) position.
2. Plug in heater. The Power Light (I) will illuminate and remain lit until the heater is unplugged.
3. Set the Thermostat Knob (J) all the way to the right.
4. Turn the Control Knob (H) to desired level of heat.

NOTE: When the heater is in use, it is normal that the heater cycles ON and OFF, this is to maintain your desired temperature.

After using the heater, turn the Control Knob (H) to “0” position, turn the Thermostat Knob (J) to lowest temperature position and unplug the heater from the socket.

Turn the Control Knob to desired heat setting.

BOH1501: 1 -600W, 2 -900W, 3-1500W

BOH2001: 1 -800W, 2 -1200W, 3 -2000W

SETTING THE THERMOSTAT

1. Set the Thermostat control all the way to max.
2. When the desired temperature/comfort level is reached, turn the thermostat control anti-clockwise to lower position or until the heater stops operating.
3. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.

NOTE: The Power light will remain lit during operation.

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature.

ANTI-FROST GUARD INSTRUCTION

If you plug in the heater, it will start working at the lowest temperature setting (When thermostat control is in the lowest temperature position, the temperature will be maintained at 5° C, thus the heater will be in the off status unless the room temperature is lower than 5° C. If the room temperature is lower than 5° C, the heater will automatically start working and will keep turning on & off all the time, maintaining its ambient temperature of 5° C.

NOTE: Unit must be unplugged for it to be fully off

TIP OVER PROTECTION

When the unit is accidentally knocked over, or tilts on one side at more than a 45° angle; it will instantly shut off. To reset, simply place the heater in an upright position.

STORAGE TIPS

If the heater is not required for long periods, for example during the summer, it should be stored at room temperature; in a dry place and preferably covered to prevent the accumulation of dust and dirt.

FITTING A REPLACEMENT PLUG FOR U.K. AND IRELAND ONLY.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type. For correct type and correct installation please refer to "Installation of a plug" below.

INSTALLATION OF A PLUG – Applicable to U.K. and Ireland.

NOTE: If you are in any doubt about wiring and the installation of the plug. Please contact a qualified electrician.

NOTE: If a 13A 3-pin plug is fitted, it must be an ASTA approved plug, conforming to the BS1363 standard. Replacement 13 amp fuse must also be BSI or ASTA approved.

The wires in this mains lead are coloured as such:

GREEN & YELLOW -	Earth
BROWN -	Live
BLUE -	Neutral

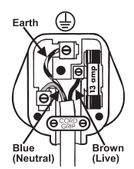

Please note that the colour of these mains wires may not correspond with the colour markings that identify the terminals in your plug.

Please proceed as follows:

- The wire which is coloured GREEN&YELLOW must be connected to the terminal which is marked with the letter E (⏚) or is coloured GREEN, or GREEN&YELLOW.